 


# EPSON® PowerLite® 503c/713c Quick Setup


START HERE

## Locate everything you'll need

For this setup, you'll need just these two cables:



power cord

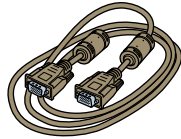



computer cable

You won't need to install any software.

## Connect the projector to your laptop

- 1 Make sure your projector and laptop are turned off.
- 2 Connect one end of the computer cable to the **Computer** port on the projector.

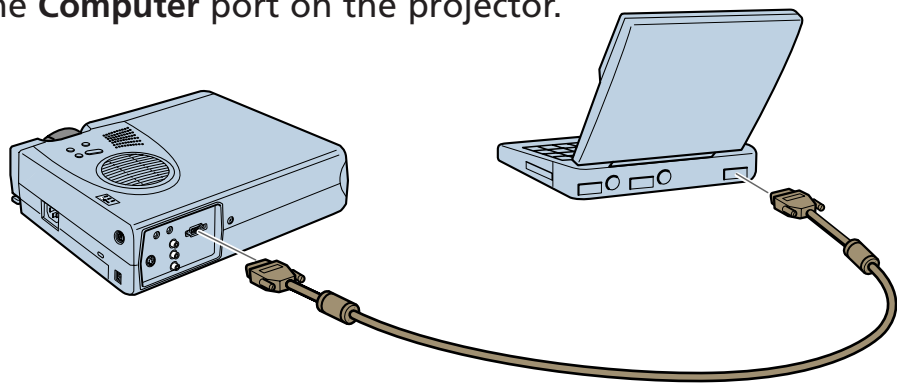


- 3 Connect the other end to your laptop's video or  monitor port. If you can't connect the cable to your PowerBook®, you may need to use an adapter. See your *User's Guide* for instructions.

Follow these instructions to connect your laptop to the projector. To connect other devices, such as a VCR or desktop PC, see your *User's Guide*.





## Plug in your projector

Connect the power cord to your projector and plug the other end into a grounded outlet.

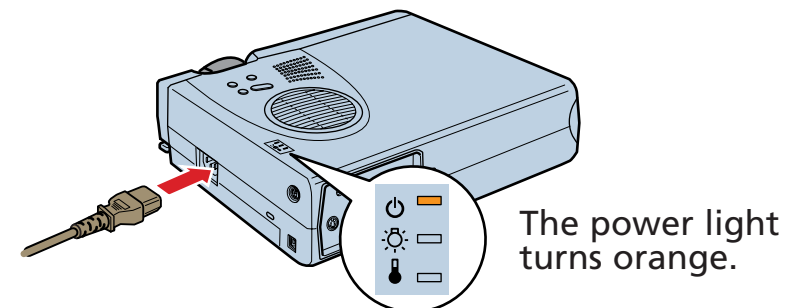


## Pop out the lens

Rotate the lens ring to pop out the lens, then squeeze the tabs to remove the lens cap.

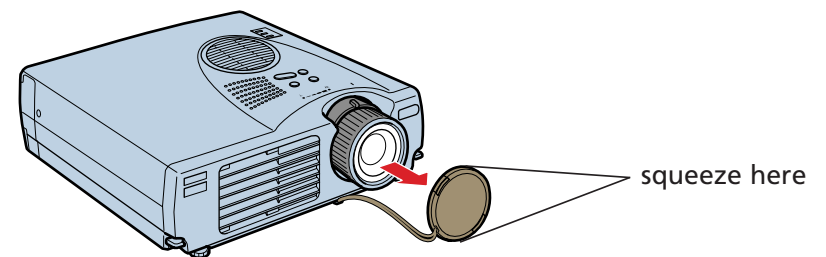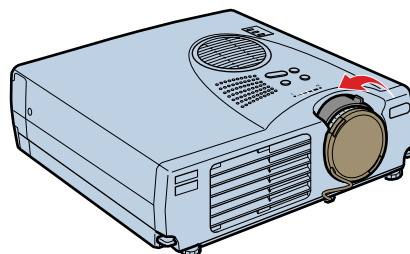


## Turn on your equipment

- 1 To turn on the projector, press the red **Power** button. The power light flashes green, and then stays on.
- 2 Turn on or restart your laptop. (Windows® only: If you see this Add New Hardware screen, click **Cancel**.)

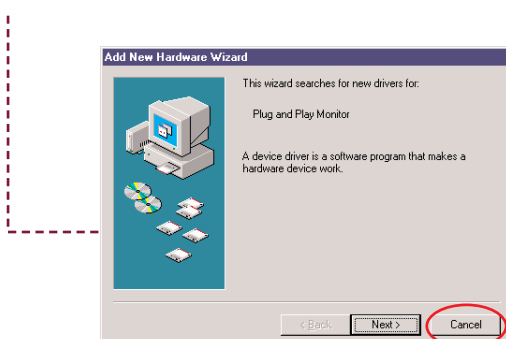



Power button

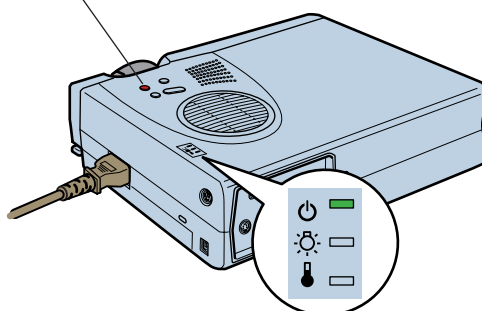

### Caution: Before unplugging the projector...

To shut the projector down properly:

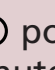
1. Press the red **Power** button twice. Let the projector cool while the  power light flashes orange (about a minute).
2. Once the light stops flashing and stays on, it's safe to unplug the projector.


Never unplug the projector when the  power light is green or flashing orange.

Turn Over

# Adjust the image


- 1 Rotate the focus ring to sharpen the image.

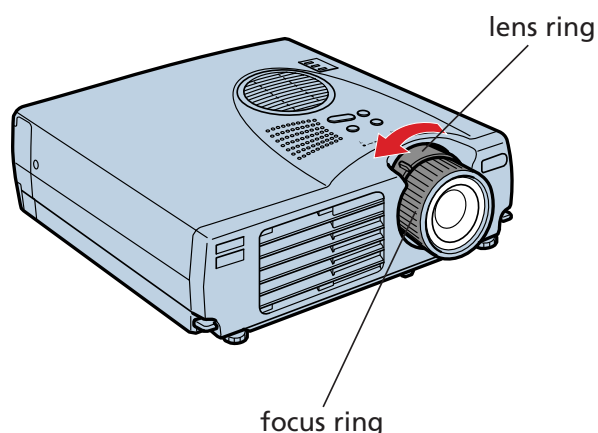





**Note:** If you see a blank screen  after focusing, see the instructions in the box below.

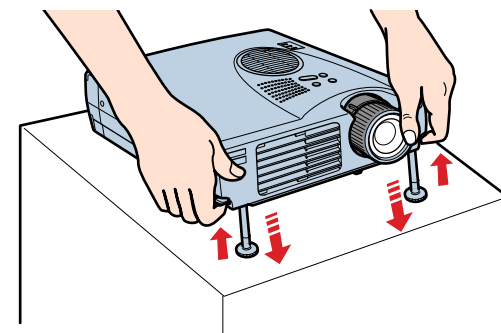- 2 Rotate the lens ring to reduce or enlarge the image. (You can also move the projector closer to or farther from the screen.)

- 3 To raise the image, pull up the blue foot release levers and lift the front of the projector. Once the image is positioned where you want it, release the levers to lock the feet in position.




- 4 If your image looks like  or , you've placed the projector off to one side of the screen, at an angle. Move it directly in front of the center of the screen, facing the screen squarely.

- 5 If your image looks like  or , press the + or – side of the **Keystone** button to correct the shape of the image.


## If You See a Blank Screen


If you see a blank screen or the **No signal** message after turning on your laptop, check the following:

- Make sure the  power light is green and not flashing and the lens cover is off.
- Try turning off the laptop and restarting it.
- If you've connected more than one computer and/or video source, you may need to press the **Source** button on top of the projector. (Allow a few seconds for the projector to sync up after pressing it.)

No signal

### If you're using a Windows laptop:


- Hold down the **Fn** button and press the function key that lets you display on an external monitor. It may have an icon such as , or it may be labelled **CRT/LCD**. Allow a few seconds for the projector to sync up after pressing it.

On most systems, the  key lets you toggle between the LCD screen and the projector, or display on both at the same time.

- You might need to use the Display utility in the Control Panel to enable both the LCD screen and external monitor port. Check your laptop's manual or online help for details.

### If you're using a Macintosh®:


1. From the Apple menu, select **Control Panels**, then click **Monitors** or **Monitors and Sound**.
2. Click the **Arrange** icon.

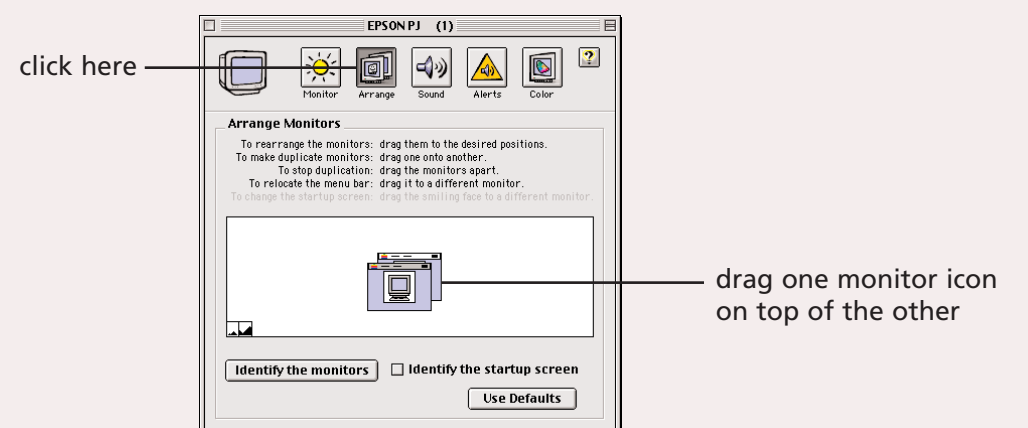

3. Drag one monitor icon on top of the other. This lets you display on the projector screen as well as the LCD screen.

If the **Arrange** option isn't available, you may need to select one of the Simulscan resolution settings:

4. Click the **Monitor** icon.

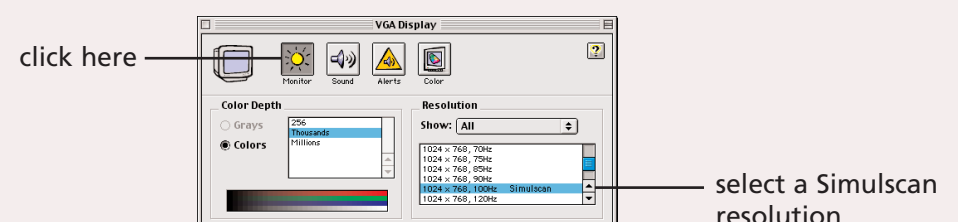

5. Select a **Simulscan** resolution as shown. (Allow a few seconds for the projector to sync up after making the selection.)

# EPSON PowerLite 503c/713c